


# PLAN VIEW

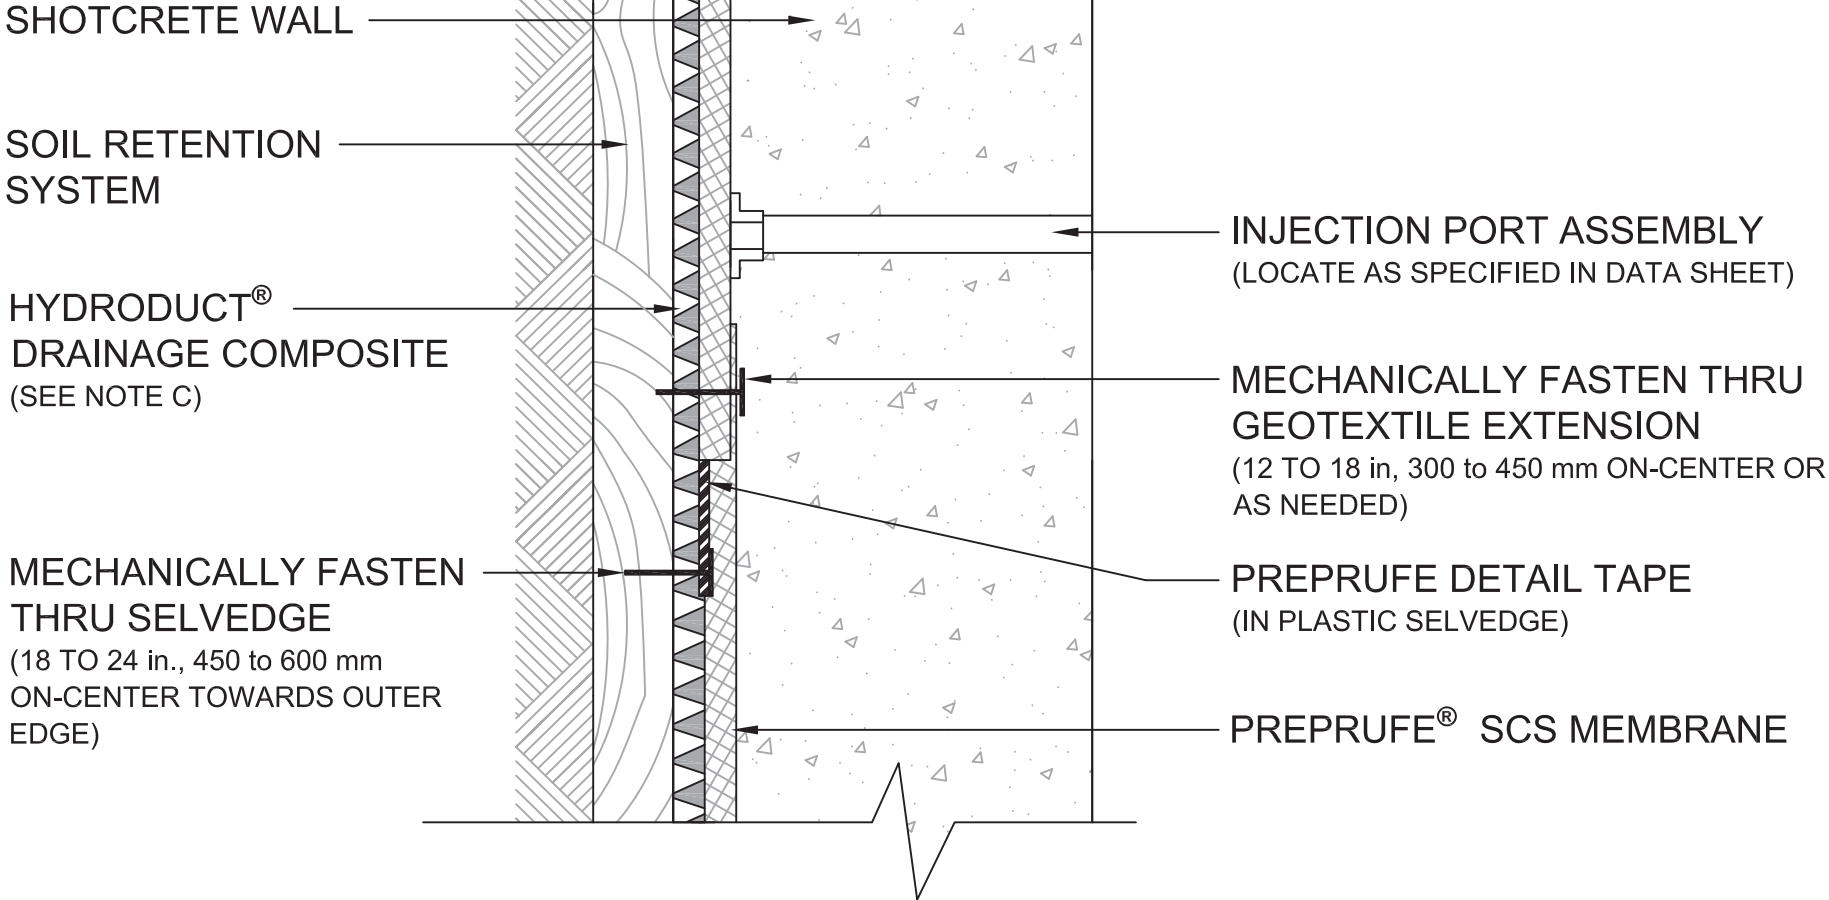

- NOTES:
- A) USE SEAM ROLLER TO ENSURE PROPER SEAL FOR PREPRUFE DETAIL TAPE
  - B) DO NOT POSITION INJECTION PORT ASSEMBLY DIRECTLY OVER THE SIDE LAP
  - C) IF HYDRODUCT IS USED AS PART OF THE DRAINAGE SYSTEM, 6 MIL, 1.5 mm POLY IS REQUIRED BETWEEN THE HYDRODUCT AND THE PREPRUFE SCS MEMBRANE



## SIDE LAP PREPRUFE® SCS WATERPROOFING SYSTEM FOR SHOTCRETE

DRAWING: SCS 001

SCALE: Not to scale

EFFECTIVE DATE: 08/1/2016

SUPERSEDES: 03172014