


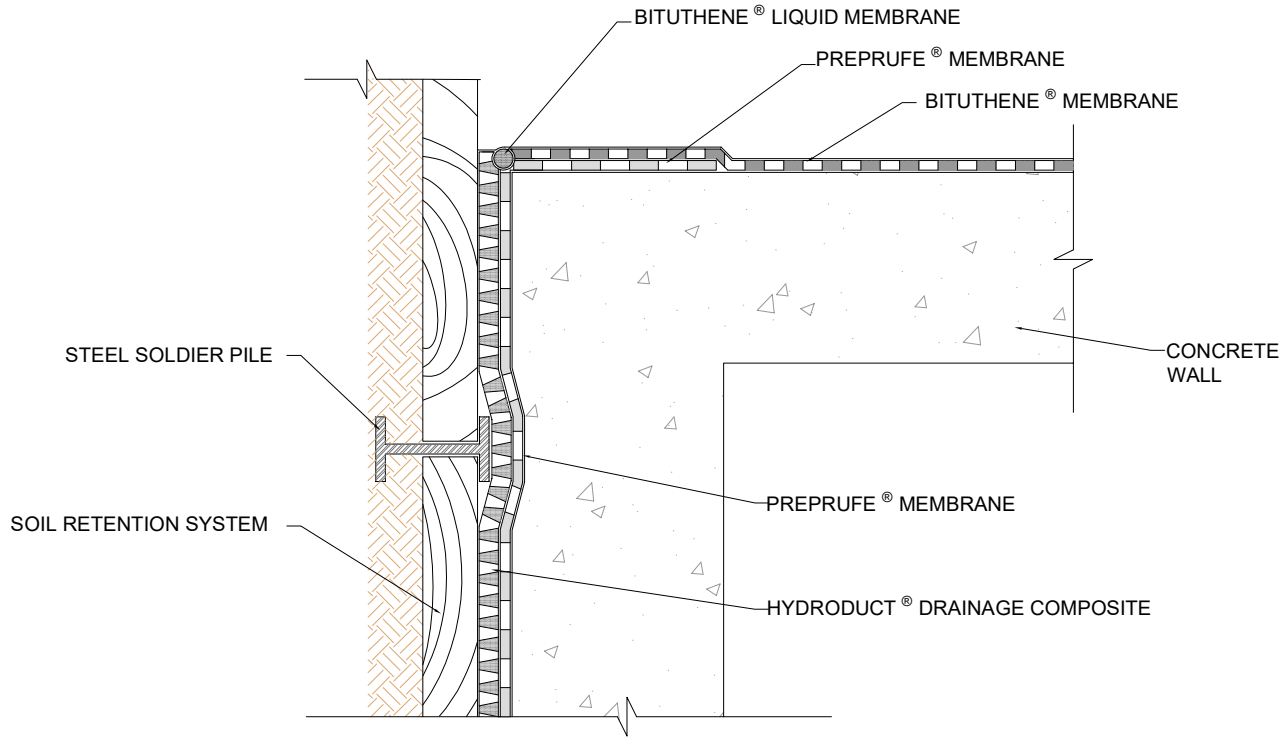

NOTES:

1. PREPRUFE® MUST BE INSTALLED INTO THE DOUBLE-SIDED FORMWORK IN ORDER TO BOND TO THE CONCRETE.
2. EXTEND THE PREPRUFE® 160R MEMBRANE A MINIMUM 6 IN. (150 MM) BEYOND THE END OF THE BLIND SIDE WALL.

TIE INTO BITUTHENE® WALL
PREPRUFE® WATERPROOFING SYSTEM

DRAWING: PRE-045

SCALE: NOT TO SCALE

EFFECTIVE DATE: 08-01-2025

SUPERCEDES: 10-10-2024