



OPTION A - INSTALLATION AFTER MEMBRANE

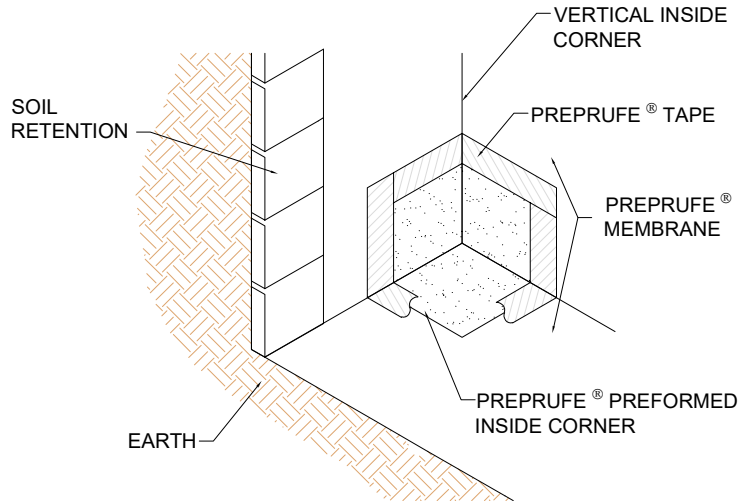

OPTION A - INSTALLATION INSTRUCTIONS:

1. REMOVE RELEASE LINER FROM BOTH SIDES OF PREPRUFE® INSIDE CORNER AND INSTALL TIGHT AGAINST PREPRUFE® MEMBRANE
2. ENSURE THE PREPRUFE® INSIDE CORNER COVERS THE PREPRUFE® MEMBRANE BY A MINIMUM OF 3 in. (75 mm) ON ALL SIDES
3. APPLY PREPRUFE® TAPE CENTERED OVER ALL EDGES OF THE PREPRUFE® INSIDE CORNER. ROLL FIRMLY IN PLACE, REMOVE RELEASE LINER AND DISCARD

OPTION B - INSTALLATION BEFORE MEMBRANE

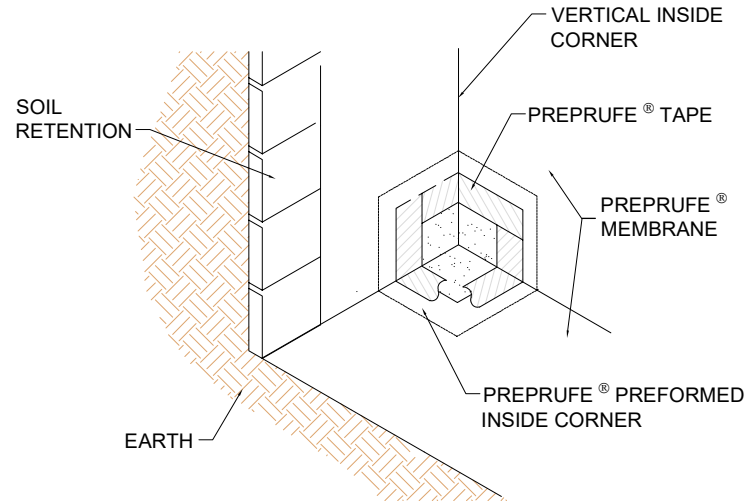

OPTION B - INSTALLATION INSTRUCTIONS:

1. INSTALL PREPRUFE® INSIDE CORNER TIGHT AGAINST SUBSTRATE, REMOVE RELEASE LINER AND DISCARD
2. APPLY PREPRUFE® MEMBRANE OVER PREPRUFE® INSIDE CORNER ENSURING A 3-5 in. (75- 125 mm) OVERLAP ONTO PREPRUFE® INSIDE CORNER
3. APPLY PREPRUFE® TAPE CENTERED OVER THE EDGE OF PREPRUFE® MEMBRANE AND ONTO THE PREPRUFE® INSIDE CORNER. ROLL FIRMLY IN PLACE, REMOVE RELEASE LINER AND DISCARD

NOTES:

- PREPRUFE® MEMBRANE SEAMS NOT SHOWN FOR CLARITY
- PREPRUFE® TAPE SHOULD OVERLAP ONTO SURFACES OF TAPE, MEMBRANE, CORNER/CAP, ETC. A MINIMUM OF 2 in. (50 mm)
- USE DETAIL PRE033 WHEN PREPRUFE® PREFORMED INSIDE CORNER IS **NOT** VIABLE