

TB-0110 — Admixture Dispenser Discharge Line Location and Sequencing for Concrete Batching Operations

Technical Bulletin

/ concrete / mix design

Cement hydration is a complex chemical reaction that begins when water is added to the concrete mix. Adding chemical admixtures to the concrete mix alters this chemical reaction in subtle and sometimes complex ways. Concrete admixtures can affect cement hydration depending upon:

1. The discharge location in the batch plant,
2. The point in time in the batch cycle (sequencing) at which they are discharged.

One excellent reference on the cement hydration process that also includes information on the use of admixtures is “Design and Control of Concrete Mixtures” by the Portland Cement Association.

GCP Applied Technologies dispensing equipment is used to add admixtures into the concrete mix during the batching cycle. This Technical Bulletin gives recommendations on admixture discharge line location and sequencing that should provide for the optimum performance of the admixtures. These recommendations should be followed for all new dispenser installations. For existing dispenser installations that do not conform to these recommendations, there is no need to change unless a concrete or admixture performance issue is experienced. If that does occur, a change in admixture sequencing should be tried first.

Three general rules of thumb should always be followed:

1. Different chemical admixtures should not come in physical contact with one another. When certain admixtures come in contact with each other, a chemical reaction can take place that will lessen or negate their performance capabilities, or could be a safety hazard. Physical contact can take place at the end of admixture discharge lines, in a water-holding tank or in a water-discharge pipe. Of particular importance, the following should always be avoided:
 - Air Entraining Agents (AEA) in contact with any set accelerators, all DCI® products and all products containing calcium chloride,
 - AEA in contact with hot water (usually greater than 140°F, 60°C (ACI 306)), and
 - Products containing calcium nitrite in contact with ADVA®, water reducers and/or mid-range water reducer products, which are a safety hazard.
2. Individual admixtures should be added at different times (known as sequencing) during the batching operation in order to allow optimum performance.
3. Continuous testing by the concrete producer is strongly recommended. If concrete testing or prior experience by the concrete producer or local GCP salesperson has taken place before dispenser installation and has shown that different admixture discharge line location or sequencing performs better than the requirements listed below, then these requirements may be modified after discussion with a GCP Dispenser Manager and Technical Service. Since all cements and other concrete-making materials differ from source to source, and can vary over time, continuous testing by the concrete producer is recommended for optimum admixture performance, especially when materials, admixture discharge location or sequencing change.

Dispenser Discharge Line Locations

GCP recommends dispenser line locations #1 and 2 below, and following the “Admixture Group Discharge Sequencing Requirements” table. Location #3 is an option when #2 is not available. Location #4 is strongly discouraged and requires special GCP approval.

Sand Charging Belt or Weigh Hopper—Discharge Air Entraining Agents onto the sand either while on the concrete plant charging (conveyor) belt or in the sand hopper. The discharge line should be mounted such that the AEA is fully absorbed by the sand and not sprayed elsewhere. Be aware that some states’ DOT may not allow this practice and special permission may be required from them. TECH BULLETIN Admixture Dispenser Discharge Line Location and Sequencing for Concrete Batching Operations

Plant Water-Discharge Pipe—Install all other admixture discharge lines, including highvolume products such as set accelerators and DCI products, into the plant water-discharge pipe using separate connection nozzles for each product. This pipe either originates at the plant water-holding tank or is a direct feed from the water meter. AEA may be discharged into the waterdischarge pipe only if a state DOT requires it, hot water will not be used, and no other admixtures are in the water at the same time. Directly Into the

Plant or Truck Mixer—Use this option when Location #2 will not work or “tail water” is not used. When discharging directly into a mixer, care must be taken to reduce the opportunity for the discharge lines to clog due to cement dust, and ensure that they are inspected and cleaned on a regular basis.

Water-Holding Tank—This admixture discharge location is not recommended under normal GCP policy. Mixing of several admixtures in the water-holding tank can be a safety hazard, and/or may cause admixture and concrete performance issues. Therefore discharging certain admixtures into the concrete plant water tank is only allowed if the customer demands it, if previous testing or experience has shown this not to be a problem, and a GCP Dispenser Manager and Technical Services approve it. Only set retarders, water reducers, mid-range water reducers and/or high-range water reducers may be discharged into the waterholding tank if the above criteria have been met.


Admixture Sequencing

Proper sequencing of admixtures provides for optimum admixture performance. This means that different admixtures should be added to the concrete batching cycle at different times. In order to control the sequencing of admixtures, the concrete producer must program the concrete batch plant computer accordingly. GCP requirements for admixture sequencing are given in the table below.

Admixture Group Discharge Sequence Requirements							
Preferred Discharge Location							
Discharge Line Location #	Air Entraining Agents (a)	Water Reducers (b)	Set Retarders (c)	Mid-Range Water Reducers (d)	High-Range Water Reducers (d)	All Other Products not listed on this row (e)	Set Accelerators and DCI Products (f)
1 Belt or hopper	As the sand is on the charging (conveyor) belt or in the sand hopper.			Not Recommended!	Not Recommended!	Not Recommended!	Not Recommended!
2 Plant water-discharge pipe	Discharge the AEA when the water starts to discharge.	Start discharge after all materials* are in the mixer but before the "tail-end" water is discharged.	Directly after water reducer but before the "tail-end" water is discharged.	Directly after water reducer and/or set retarders but before the "tail-end" water is discharged.	Directly after water reducer, retarders and/or MRWR but before the "tail-end" water is discharged.	Directly after water reducer, type products but before set accelerators, DCI products and "tail-end" water enter the mix.	At the very end of mix cycle** after all other admixtures.
3 Central or truck mixer		Start discharge after all materials* are in the mixer but before the "tail-end" water is discharged.	Directly after water reducer but before the "tail-end" water is discharged.	Directly after water reducer and set retarders but before the "tail-end" water is discharged.	Directly after water reducer, retarders and MRWR but before the "tail-end" water is discharged.	Directly after water reducer, type products but before set accelerators, DCI products and "tail-end" water enter the mix.	At the very end of mix cycle** after all other admixtures.
4 Water-hold-ing tank	Not Recommended!	Into the water-holding tank as the tank is filling and before the tank starts to discharge.	Into the water-holding tank after the water reducers and before the tank starts to discharge.	Into the water-holding tank after the water reducers and set retarders and before the tank starts to discharge.	Into the water-holding tank after the water reducers and set retarders and mid-range water reducers and before the tank starts to discharge.	Not Recommended!	Not Recommended!

* All materials means cement, other cementitious, sand, aggregate and initial water.

** This could be after the "tail-end" water enters the mix.

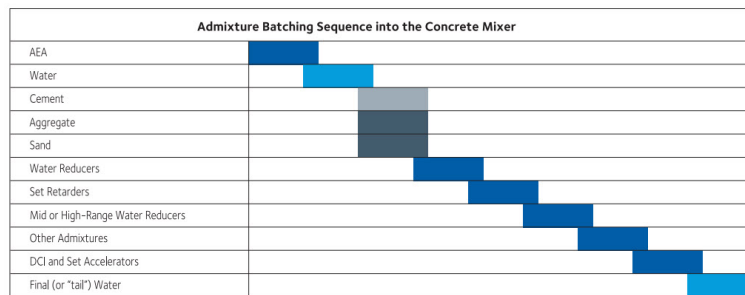

- Air Entraining Agents – Should be added up front in the batching process in order to allow air to build in the concrete.
- Water Reducers – Should be added after all dry materials and most of the water are added in the batching process.
- Set Retarder – Start the discharge of these admixtures immediately to follow the water reducer discharge.
- Mid-Range or High-Range Water Reducers – Start the discharge of these admixtures immediately to follow the water reducer and set retarder discharge.
- Other products:
 - RECOVER[®] – In general, start the discharge of these admixtures immediately to follow the high-range, mid-range or water reducers.
 - ECLIPSE[®] – In general, start the discharge of these admixtures immediately to follow all water reducers, set retarders, MRWR or HRWR.
- Set Accelerators or DCI products – Sequence the discharge of these admixtures at the tail end of the batching process using larger diameter hoses and pumps, such that discharge is fast and finishes discharging ten seconds before the end of the batching cycle.

gcpat.com | North America Customer Service: +1 (877) 423 6491

We hope the information here will be helpful. It is based on data and knowledge considered to be true and accurate and is offered for consideration, investigation and verification by the user, but we do not warrant the results to be obtained. Please read all statements, recommendations and suggestions in conjunction with our conditions of sale, which apply to all goods supplied by us. No statement, recommendation, or suggestion is intended for any use that would infringe any patent, copyright, or other third party right.

ADVA, DCI, RECOVER, and ECLIPSE is a trademark, which may be registered in the United States and/or other countries, of GCP Applied Technologies Inc. This trademark list has been compiled using available published information as of the publication date and may not accurately reflect current trademark ownership or status.

© Copyright 2018 GCP Applied Technologies Inc. All rights reserved.

In Canada, 294 Clements Road, West, Ajax, Ontario, Canada L1S 3C6.

GCP Applied Technologies Inc., 2325 Lakeview Parkway, Suite 400, Alpharetta, GA 30009, USA

GCP Canada, Inc., 294 Clements Road, West, Ajax, Ontario, Canada L1S 3C6

This document is only current as of the last updated date stated below and is valid only for use in the United States. It is important that you always refer to the currently available information at the URL below to provide the most current product information at the time of use. Additional literature such as Contractor Manuals, Technical Bulletins, Detail Drawings and detailing recommendations and other relevant documents are also available on www.gcpat.com. Information found on other websites must not be relied upon, as they may not be up-to-date or applicable to the conditions in your location and we do not accept any responsibility for their content. If there are any conflicts or if you need more information, please contact GCP Customer Service.

Last Updated: 2023-06-28

gcpat.com/solutions/products/adva-high-range-water-reducers/tb-0110-admixture-dispenser-discharge-line