


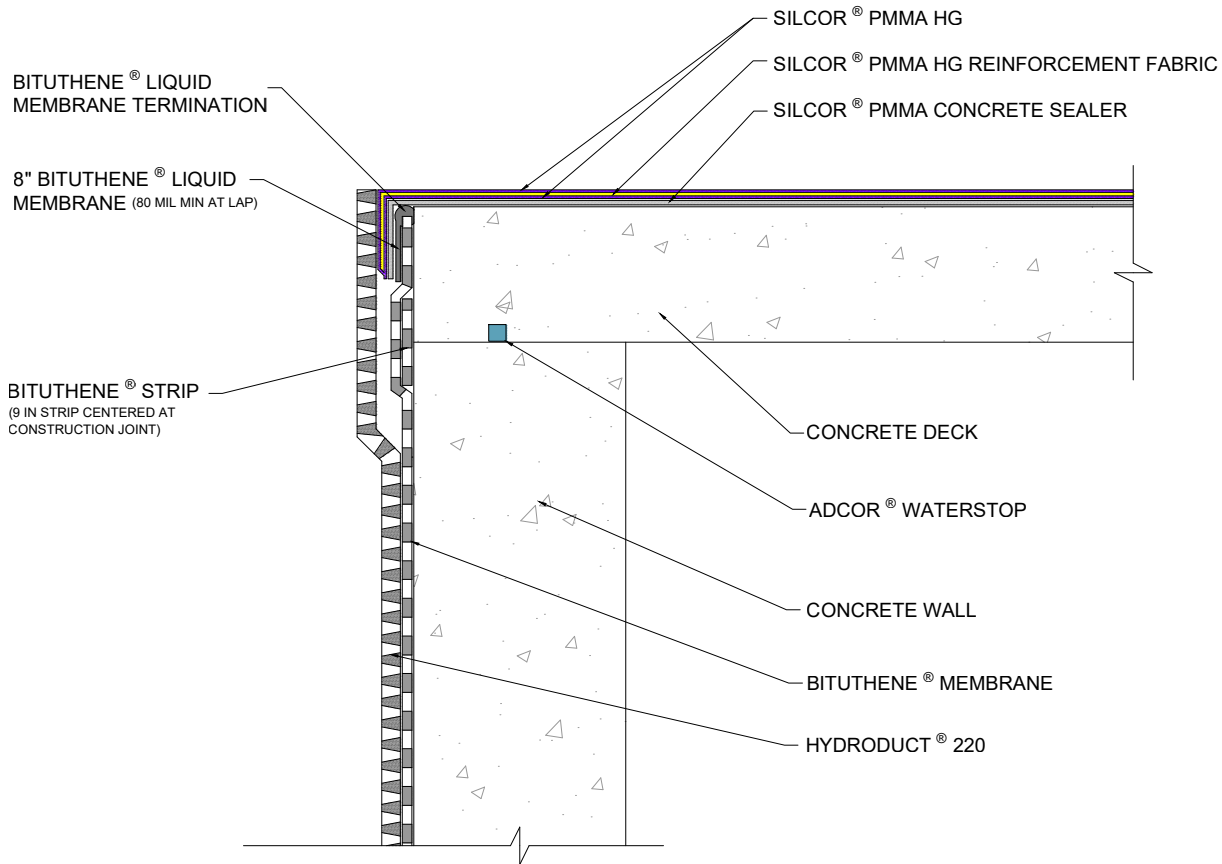

NOTE: PMMA SURFACE MUST BE ABRADED AND ACETONE WIPED CLEAN PRIOR TO BITUTHENE INSTALLATION